



Thank you for ordering our Billet Swith Set-up! For installment, follow these important guidelines.

- 1.) Apply fuse holder.
- 2.) Apply heat to heat shrink area to bend harness in postion and prevent damage to switches
- 3.) Must leave slack in wire for motor vibration. Failure to do so will cause damage or separate switches from housing.
- 4.) If your adding boots, apply blue loctite
- 5.) Never leave wires exposed

Wire Diagrams

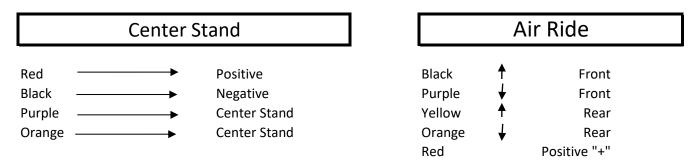

Purple And Orange May Need To Be Swapped For Desired Directional Stand Operation

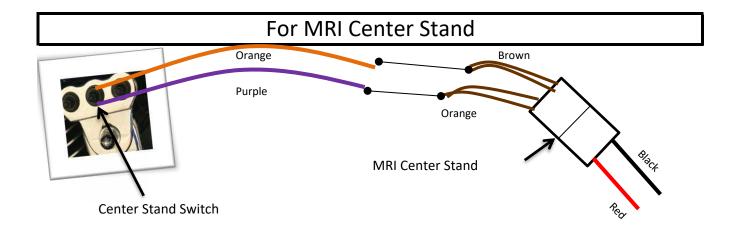

Tie both MRI Wires Together On Each Side Then Connect Them To My Purple & Orange Wires. Check Stand Operational Direction Before Soldering/Crimping Wires.



Wire Diagrams J&R Height Repeater

